

TINY STEPS™ GROOVE

3-in-1 Activity Walker

3 MODES
grow with your child



Removable electronic
piano for on-the-go fun!



Height-adjustable seat



Easy-clean child tray

Kolcraft®



Scan for instructional video



Escanee para obtener
instrucciones en español

Model #: KW038
W038-R1 04/2022

WARNING

Read all instructions BEFORE assembly and USE of the walker. Failure to follow these warnings and instructions could result in serious injury or death. For your child's safety, read the labels and the instructions before using product. Keep instructions for future use.

IMPORTANT SAFETY INFORMATION:

How to Keep Your Child Safe While Using this Product

- **NEVER** leave child unattended. Always keep child in view while **IN WALKER**.
- **CAUTION: Toys intended to be assembled by adult! The Piano Toy can be played with attached and removed from the tray. All other toys are intended to be played with while attached to the walker and are not intended to be played with when not attached to the walker.**
- **CHOKING HAZARD-Small parts. ADULT ASSEMBLY REQUIRED.**
This package contains small parts which, before assembly, present a choking hazard to children under the age of three. Care should be taken during unpacking and assembly to ensure that all small parts and plastic bags are accounted for and kept out of the reach of children. All fasteners should be fully tightened when assembling the walker and each time the Piano is reinstalled into the tray. Store piano bolts out of reach when Piano is removed from the tray.

STAIR HAZARD

- Avoid serious injury or death. Block stairs / steps securely before using this walker.
- Use only on flat surfaces free of objects that could cause this walker to tip over. Never use near stairs, steps, thresholds, hills, roadways, or pools.
- To avoid burns, keep child away from hot liquids, stoves, radiators, space heaters, fireplaces, etc.
- Discontinue using this walker should it become damaged or broken.
- Never carry this walker with child in it. Never adjust seat while child is in product.
- **DO NOT** lift or carry by tray or toys.
- **DO NOT** use this walker until baby can sit up unassisted.
- To reduce the chance of child slipping out of seat, check that both feet of child touch the floor.
- Discontinue use of activity walker (seated stage) when your child can stand unaided, walk unassisted or lift the walker off of the floor.
- To maintain stopping performance, clean friction strips regularly with damp cloth.

Only use this activity walker (seated stage) if your child MEETS ALL of the requirements below:

1. Can support body weight with legs
2. Weight is between 15 and 26 pounds.
3. Height is less than 32 inches and child is not able to stand flat footed while in the walker.

CARE & MAINTENANCE

1. Plastic Parts: Wipe clean with mild soap and a damp cloth. Air dry.
2. Seat Pad: Machine wash in cold water in gentle cycle.
Air or hang dry. **DO NOT** use harsh detergents or bleach.
DO NOT dry clean.

NOTE: To maintain stopping performance, clean friction strips regularly with damp cloth.

PARTS LIST



Leg (2)



Front Base Casters (2)



Front Base



Side Base (2)



Wheel Housings (2)



Tray



Walk-Behind Handle



Seat Back



Seat Pad



Maraca Toy



Piano



Piano Bolts (2)




Spinner Toy

Tool Needed: Phillips screwdriver


Requires 3 AAA batteries (not included)

HOW TO ASSEMBLE YOUR WALKER

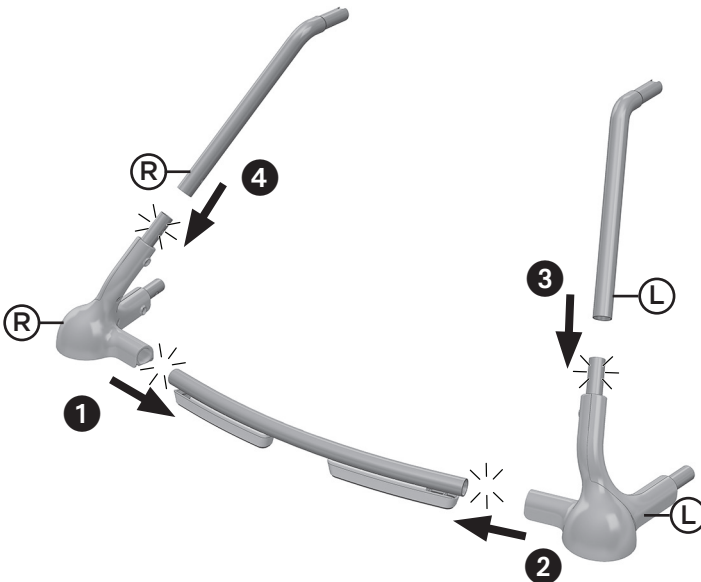


Ensure all spring buttons are clicked into place.

Ensure all spring buttons are clicked into place.

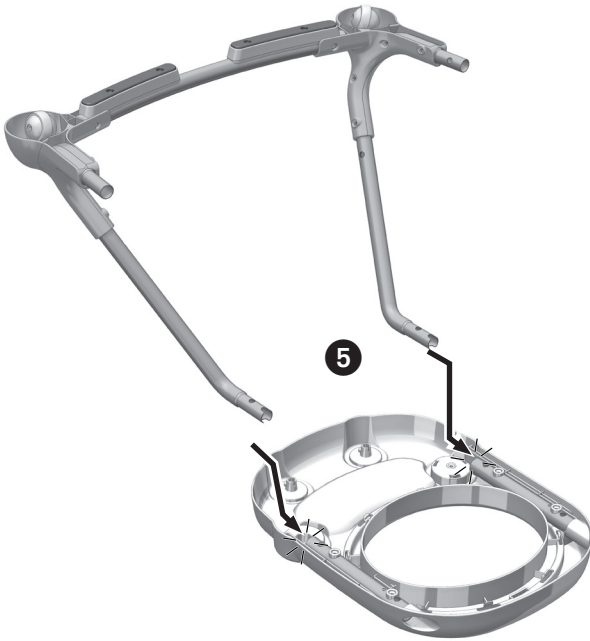


Ensure all spring buttons are clicked into place.

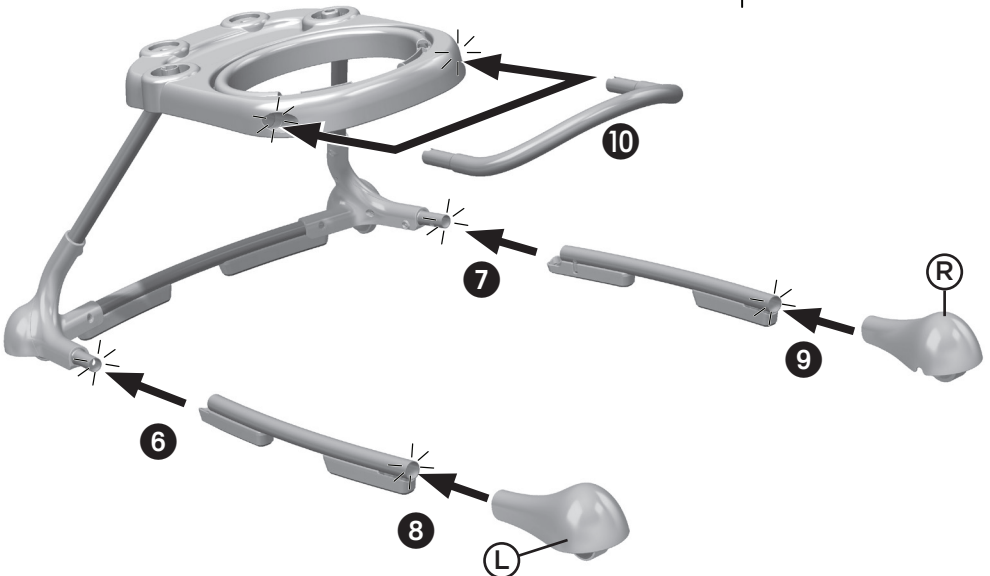





- 11** Align back support at a slight angle as shown, and insert into tray.

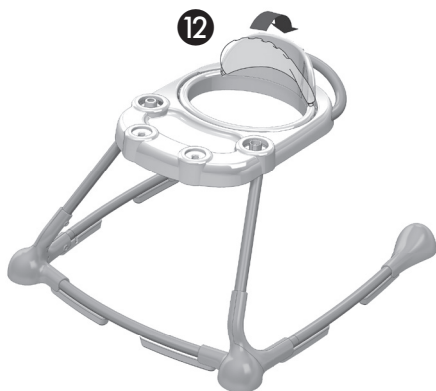


- 12** Position back support upright so it locks into place.

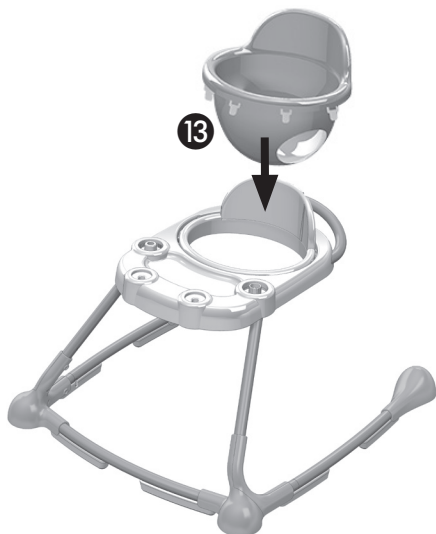

- 13** Place seat pad into seat ring located on tray. Align it so that high back support aligns with back of walker ring.

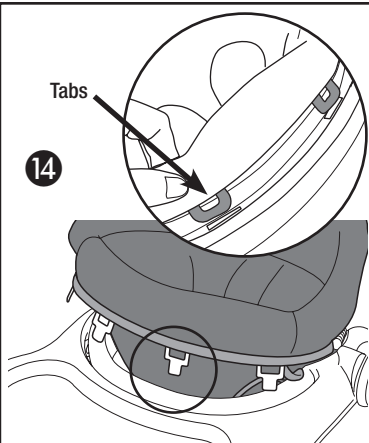

- 14** Start by inserting the two fabric pulls on the seat pad into the slots located at the seat back support. Then, insert the other 6 plastic tabs on the seat pad into slots located around the front of the seat ring. Slide tabs through holes.

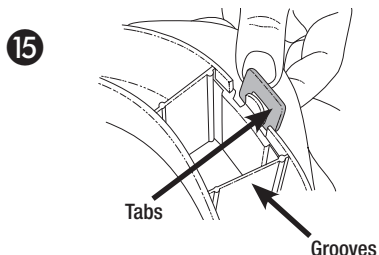


- 15** Underneath the tray, pull tabs and align into grooves.

Test: Push down hard on seating area of seat pad to make sure seat is securely in place.

CAUTION: Do not use walker if all tabs are not secured properly, otherwise child may fall through walker.

To Adjust Seat Pad Height

NOTE: As your child begins to grow, adjust height of walker via the seat pad so that their feet touch the ground when seated. To determine correct height after assembly, place child in walker and make sure both feet touch the ground but are not flat footed. Always make sure seat pad is adjusted to the correct height position before placing child in product.

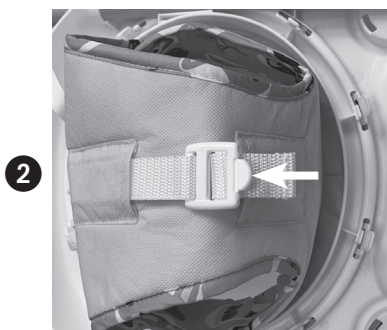


- 1** After seat pad is attached to tray, flip unit upside down to access the adjustment strap on underside of seat pad.
- 2** Please note, to ensure proper operation, you will need to periodically adjust the seat adjustment strap to accommodate your child's increased height. For **smaller babies**, seat pad should be extended to its lowest position. To adjust seat height, push button in on adjustment strap to release restraint.
- 3** As baby grows, raise seat by tightening strap. This helps to prevent the child from placing their feet flat on ground and prevents your child from climbing out.

To Install Batteries in Piano - Para instalar las pilas en el piano


- 1** To insert batteries, use a Phillips head screwdriver to unfasten battery cover.



- 2** Requires 3 "AAA" batteries (Not Included). Insert batteries as shown. Secure battery cover.

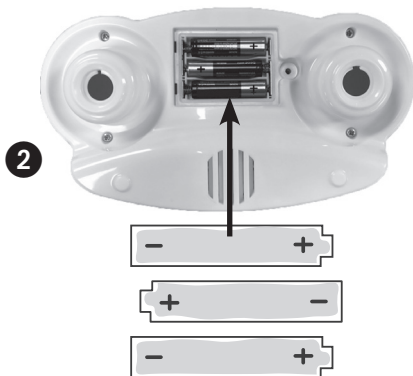

- 3** This toy has 2 levels of volume. Move switch to the middle position for low volume and to the far right for high volume. To turn off, move switch to "0" position.

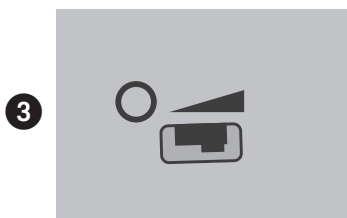


⚠ CAUTION

To prevent battery leaks, which can burn skin and eyes:

- Remove batteries when storing product for a long time.
- Dispose of used batteries immediately.
- Always replace the entire set of batteries at one time.
- Never mix old and new batteries, or batteries of different brands or types.

To Attach Toys to Tray

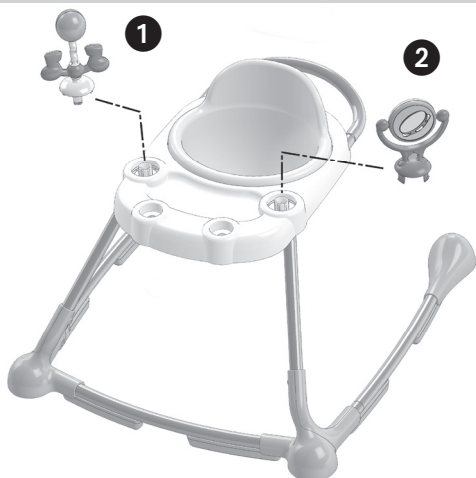

Piano Removal for Independent Play



⚠ WARNING:
CHOKING HAZARD-
Keep piano bolts out of child's reach
when Piano is detached from the tray.

- 1 Unscrew the piano bolts from tray and lift up on the piano to remove.



Please direct any comments, questions or replacement part requests to:
Kolcraft® Consumer Service Department
1100 W Monroe St. Chicago, IL 60607
1-800-453-7673 in U.S., 1-312-361-6315 outside U.S.
8 am-5 pm (CT) Monday - Thursday, 8 am - 3 pm Friday (CT)
e-mail: customerservice@kolcraft.com